

Bare Bones Guide to using the Eidrol R-09 Portable Digital Audio Recorder



Recording

1. Turn on the power.
The power button is on the left side of recorder near the top.
Press for approx 2 seconds to turn on the recorder.
The display should light up.
2. Press REC button on the front of recorder to enter Record-Pause mode.
Check the display to see that you have a reasonable recording level.
Bars for left and right channels should be over half-way, but should not go all the way to the right. If the red PEAK indicator lights, your recording level is too high.
3. Adjust the recording level by pressing the + or - buttons on the left side of the recorder just below the power switch.
4. Press the REC button again to actually begin recording. The counter numbers in the display should be changing.
5. Press the stop button to end recording. (the square icon just below the REC button)



note: default settings on the back of the recorder:

AGC (automatic gain control): OFF

MIC TYPE (only applies to an external mic plugged into the mic input): MONO

LOW CUT (reduces low frequency sounds like fluorescent lighting hum): OFF

MIC GAIN (sensitivity of the mic): HIGH

Playback



1. Turn on the power as above.
2. Connect headphones to the headphone jack on the right side of the recorder near the top.
3. Select the track you want to hear using the previous and next buttons on the control panel.
4. Play the track using the play/pause button on the control panel.
5. Adjust the headphone level using the + and - buttons on the right side of the recorder just below the headphone jack.

Moving audio files to a computer

Release the latch and slide the bottom cover half-way open
(note: picture shows cover all the way open for changing batteries).

option 1: Push in the SD card to make it pop out. Flip open the built-in USB connector and insert it into the USB slot on your computer. It should appear as a removable drive on your computer. (The recorder power should be OFF when you remove the USB card)



option 2: Connect the USB cable from the recorder to your computer. Turn on the power for the recorder. It should appear as a removable drive on your computer.