

RECORDING



1. Turn on the power. The power button is on the right side of the recorder near the bottom. Press until the Display lights up.
2. Press REC button once to enter Record-Pause mode. The light blinks while in recording standby mode.
3. Check the display to see that you have a reasonable recording level.
4. Bars for left and right channels should be over half-way, but should not go all the way to the right. If the red PEAK indicator lights, your recording level is too high.
5. Adjust the recording level by pressing the INPUT LEVEL + or - buttons on the left side of the recorder.
6. Press the REC button again to begin recording. The counter numbers in the display should be changing and the REC indicator will be lit red.
7. Press the stop button to end recording (square icon below the REC button)



Note default settings on the back of the recorder:

LIMITER/AGC (automatic gain control): OFF

PLUG-IN POWER (when using an external powered mic): OFF

LOW CUT (reduces low frequency sounds like fluorescent lighting hum): OFF

MIC GAIN (sensitivity of the mic): HIGH

PLAYBACK



1. Turn on the power as above.
2. Connect headphones to the headphone jack on the top of the recorder.
3. Select the track you want to hear using the previous and next buttons on the control panel.
4. Play the track using the play/pause button on the control panel.
5. Adjust the headphone level using the + and - buttons on the right side of the recorder.

MOVE AUDIO FILES TO A COMPUTER

Ensure the recorder is turned off, then release the latch on the bottom.

Connect the USB cable from the recorder to your PC.

Turn on the power for the recorder - it will appear as a removable drive on your PC.

