

Classroom AV

Turn on the system

Touch the screen to wake up the Crestron control system. Each of these systems is custom configured to its room. There are usually buttons to turn on the projector, bring down the screen and show PC, elmo/laptop, DVD or VCR and control volume. The installed computer is the PC.



Optional: Connecting your laptop

Usually the laptop passes through the document camera (elmo) on its way to the projector. That means you have to select elmo on the touch screen, then look at the elmo to find the button that says laptop.

Plug the loose VGA cable into the external monitor port on your laptop.

Turn on your laptop.

If the computer image doesn't appear on the screen:

Press Fn-F7 (thinkpad)



Playing a VHS or DVD

Press DVD or VHS on the Crestron touch panel.

The display will show the appropriate controls (play/rewind/stop)

The player is in the cabinet. Insert tape or disc and use the touch panel display to control playback.